



---

## IntraStack™ 6014DSB MII Expansion Modules

---

### READ ME FIRST

Thank you for purchasing an MII Expansion Module for your IntraStack 6014DSB.

This document contains important information regarding the MII Expansion Modules. Please review it before continuing with the installation.

#### Installing an MII Expansion Module

- ▲ **Important:** The MII Expansion Modules are **NOT** hot-swappable; you must power off the IntraStack 6014DSB before installing a module.

Follow the sequence below when installing an MII Expansion Module:

- Power off the IntraStack 6014DSB.
- Install the MII Expansion Module (as described in the Installation Guide).
- Power on the IntraStack 6014DSB.



---

## IntraStack™ 6014DSB MII Expansion Modules

---

### READ ME FIRST

Thank you for purchasing an MII Expansion Module for your IntraStack 6014DSB.

This document contains important information regarding the MII Expansion Modules. Please review it before continuing with the installation.

#### Installing an MII Expansion Module

- ▲ **Important:** The MII Expansion Modules are **NOT** hot-swappable; you must power off the IntraStack 6014DSB before installing a module.

Follow the sequence below when installing an MII Expansion Module:

- Power off the IntraStack 6014DSB.
- Install the MII Expansion Module (as described in the Installation Guide).
- Power on the IntraStack 6014DSB.